

C V R Murty
 Indian Institute of Technology
 Kanpur, Kanpur 208 016, India
 Email: eqtips@iitk.ac.in

Learning Earthquake Design and Construction
12. How do Brick Masonry Houses Behave during Earthquakes?

Behaviour of Brick Masonry Walls

Masonry buildings are brittle structures and one of the most vulnerable of the entire building stock under strong earthquake shaking. The large number of human fatalities in such constructions during the past earthquakes in India corroborates this. Thus, it is very important to improve the seismic behaviour of masonry buildings. A number of earthquake-resistant features can be introduced to achieve this objective.

Keywords
 Earthquake, brick masonry.


Figure 1. Basic components of a masonry building – walls are sensitive to direction of earthquake forces.

Ground vibrations during earthquakes cause inertia forces at locations of mass in the building. These forces travel through the roof and walls to the foundation. The main emphasis is on ensuring that these forces reach the ground without causing

major damage or collapse. Of the three components of a masonry building (*roof, wall and foundation*) (*Figure 1a*), the walls are most vulnerable to damage caused by horizontal forces due to earthquake. A wall topples down easily if pushed horizontally at the top in a direction perpendicular to its plane (termed *weak direction*), but offers much greater resistance if pushed along its length (termed *strong direction*) (*Figure 1b*).

The ground shakes simultaneously in the vertical and two horizontal directions during earthquakes (Earthquake Tip 5). However, the horizontal vibrations are the most damaging to normal masonry buildings. Horizontal inertia force developed at the roof transfers to the walls acting either in the weak or in the strong direction. If all the walls are not tied together like a box, the walls loaded in their weak direction tend to topple (*Figure 2a*).

To ensure good seismic performance, all walls must

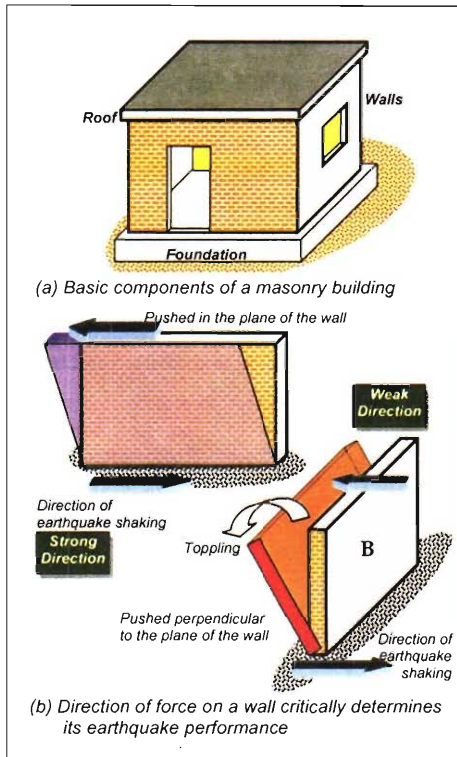

be joined properly to the adjacent walls. In this way, walls loaded in their weak direction can *take advantage* of the good lateral resistance offered by walls loaded in their strong direction (*Figure 2b*). Further, walls also need to be tied to the roof and foundation to preserve their overall integrity.

How to Improve Behaviour of Masonry Walls

Masonry walls are slender because of their small thickness compared to their height and length. A simple way of making these walls behave well during earthquake shaking is by making them act together as a box along with the roof at the top and with the foundation at the bottom. A number of construction aspects are required to ensure this box action. Firstly, connections between the walls should be good. This can be achieved by (a) ensuring good interlocking of the masonry courses at the junctions, and (b) employing horizontal bands at various levels, particularly at the lintel level. Secondly, the sizes of door and window openings need to be kept small. The smaller the openings, the larger is the resistance offered by the wall. Thirdly, the tendency of a wall to topple when pushed in the weak direction can be reduced by limiting its length-to-thickness and height-to-thickness ratios (*Figure 3*). Design codes specify limits for these ratios. A wall that is too tall or too long in comparison to its thickness, is particularly vulnerable to shaking in its weak direction (*Figure 3*).

Choice and Quality of Building Materials

Earthquake performance of a masonry wall is very sensitive to the properties of its constituents, namely masonry units and mortar. The properties of these materials vary across India due to variation in raw materials and construction methods. A variety of masonry units are used in the country, e.g., clay bricks (burnt and unburnt), concrete blocks (solid and hollow), stone blocks.

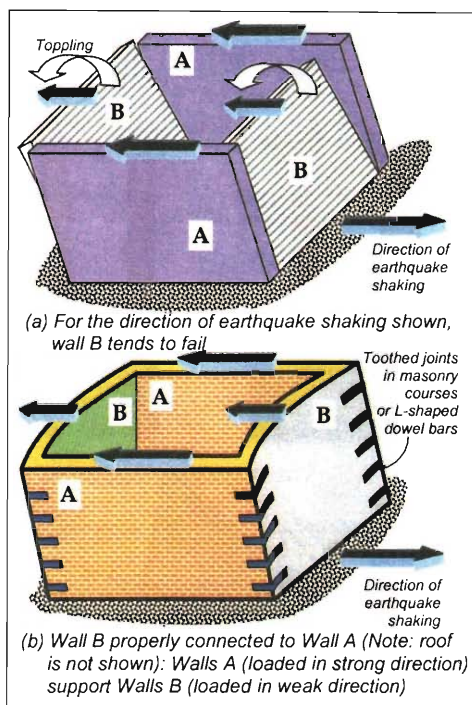


Figure 2. Advantage sharing between walls – only possible if walls are well connected.

Suggestions/comments may be sent to: eqtips@iitk.ac.in.

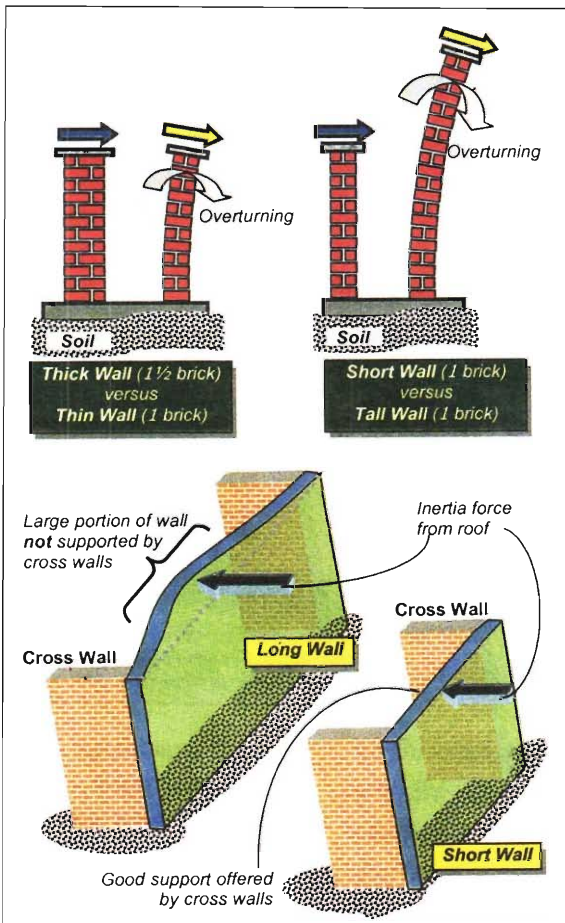


Figure 3. Slender walls are vulnerable – height and length to be kept within limits. Note: In this figure, the effect of roof on walls is not shown.

depends on the relative strengths of brick and mortar. Bricks must be stronger than mortar. Excessive thickness of mortar is not desirable. A 10mm thick mortar layer is generally satisfactory from practical and aesthetic considerations. Indian Standards prescribe the preferred types and grades of bricks and mortars to be used in buildings in each seismic zone.

Suggested Reading

- [1] IS 1905, *Indian Standard Code of Practice for Structural Use of Unreinforced Masonry*, Bureau of Indian Standards, New Delhi, 1987.
- [2] IS 4326, *Indian Standard Code of Practice for Earthquake Resistant Design and Construction of Buildings*, Bureau of Indian Standards, New Delhi, 1993.
- [3] IS 13828, *Indian Standard Guidelines for Improving Earthquake Resistance of Low-strength Masonry Buildings*, Bureau of Indian Standards, New Delhi, 1993.
- [4] T Paulay and M J N Priestley, *Seismic Design of Reinforced Concrete and Masonry Buildings*, John Wiley & Sons, New York, 1992.